


Standard Bore Service Tools

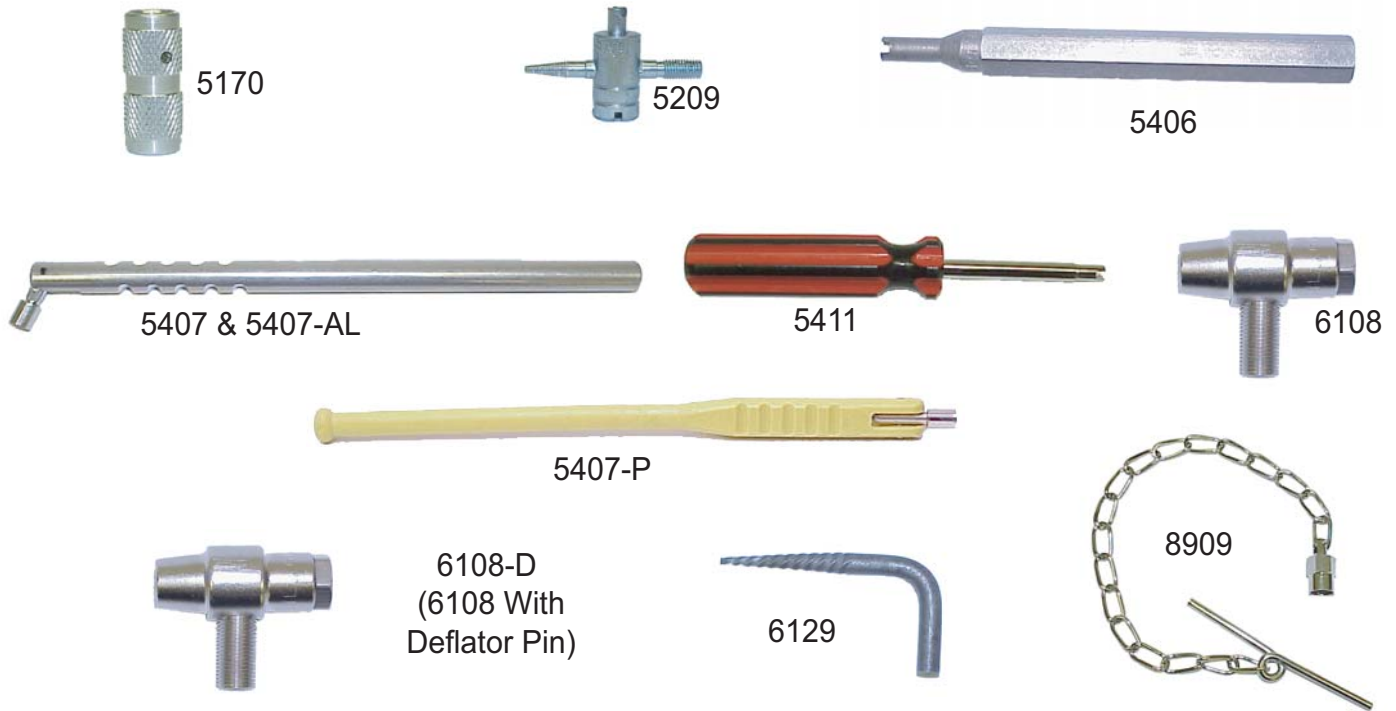

Dill #	Type	Features/Applications
5170	Valve Core Wrench & Tire Deflator	Dual purpose tool, becomes tire deflator when screwed firmly over valve
5209	4-Way Valve Tool	Inserts and removes valve cores including cores with broken swivels, cleans and recuts threads on both inside and outside of valve.
5406	Core Inserter	Hexagonal, all metal, overall length 3" for positive finger tip control, nickel plated.
5407	Snap-in Valve Installation	Rugged tool handles any length valve snap-in valve in any size rim, screws over valve threads, quickly install snap-in valves by applying pulling pressure.
5407-AL	Snap-in Valve Installation	5407-AL is an aluminum version of the 5407 installation tool with a unique built-in valve core driver on the end of the handle.
5407-P	Snap-in Valve Installation	This is a plastic version of the 5407 installation tool with an internal metal bar to maintain strength and rigidity.
5411	Valve Core Screwdriver	Compact, sturdy tool with plastic handle, allows firm grip to insert and remove valve cores, measure 4.375" overall.
6108	Tube Deflator	Quickly deflates tubes by applying air pressure to side inlet with air chuck, pressure action siphons air from tube.
6108-D	Deflating Nozzle	Same as 6108 with additional deflator pin.
6129	Core Extractor	Easy out, left-handed thread easily removes core with broken swivel.
8909	Valve Fishing Tool	Aligns and holds valve in position with valve hole while mounting tire, fits all valve hole sizes.