

**What if a Sensor does not fit my custom wheels?
Try banding the sensor to the wheel following these simple instructions:**



Step 1:
Unscrew the nut
from the sensor




Step 2:
Bend the top of the
universal cradle
(Dill P/N 1025-U)

The Universal Cradle (1025-U) can be used with clamp-in and snap-in sensors.



Step 3:
Place sensor through
the hole and tighten
the nut. Sensor may
not be flush with the
cradle.

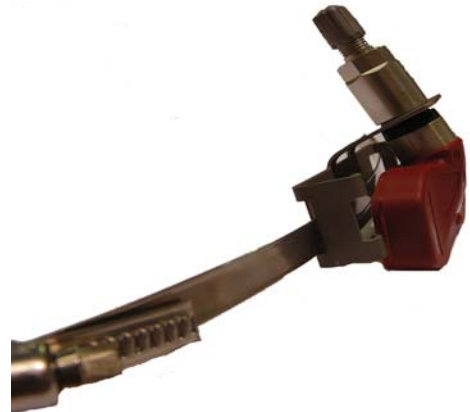

Step 4:
Slide universal band (Dill
P/N 1194) through cradle
to band sensor to the wheel.
Follow band instructions
for proper installation.

Step 5:
Be sure to use your
diagnostic tool to ensure
the sensor is functioning
and the vehicle is receiving
the signal.